


FIGURE-01

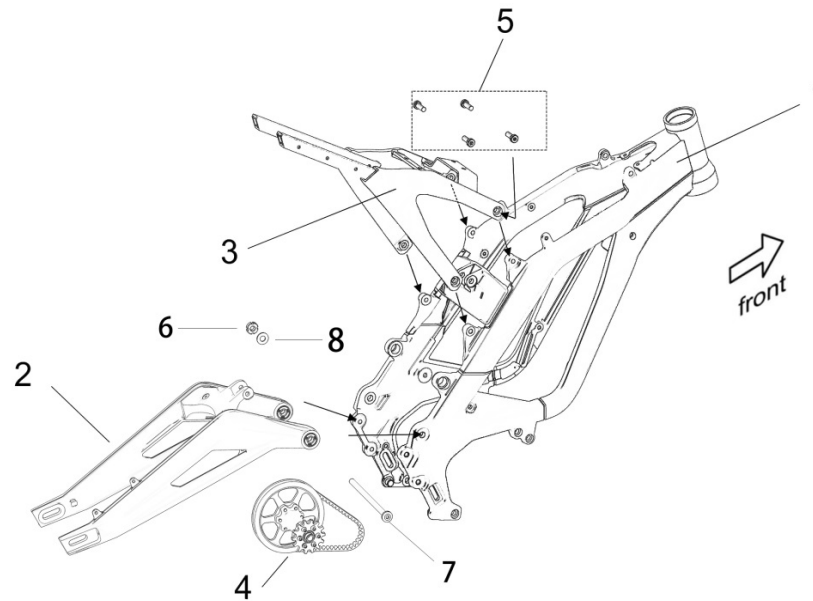

Item	Ref. No.	Description (EN)	Qty.
1_01	41100-YQ2B-0000	Frame Assy.	1
1_02	61000-YQ2A-0000	Rear Fork Assy.	1
1_03	41520-YQ2A-0000	Seat Frame Assy.	1
1_04		Mid. Shaft Bush Assy.	1
1_05	B3-009-08-020-F0	Screw (M8*20)	4
1_06	B4-008-10-F0	Nut (M10*1.0)	1
1_07	61260-YQ2A-0000	Rear Fork Mid. Shaft	1
1_08	B4-001-10-F1	Washer (Φ10-Φ20-2)	1


FIGURE-02

Item	Ref. No.	Description (EN)	Qty.
2_01	61000-YQ2A-0000	Rear Fork Assy.	1
2_02	FB05-005-10-15-22-2	Washer (Φ10*Φ15*Φ22-2)	2
2_03	B3-002-05-010-F0	Screw (M5*10)	3
2_04	Z-6000-2Z-26-10-08	Rear Fork Bearing	4
2_05	32120-YQ2A-0000	Protection Cover, Mid. Shaft	1
2_06	B2-001-06-F2	Tensioner Adjust Nut (M6)	2
2_07	B1-004-06-035-F0	Tensioner Adjust Bolt (M6*35)	2
2_08	61210-YQ2A-0000	Tensioner	2
2_09	B3-002-05-010-F0	Wire Clip Fixing Screw (M5*10)	1

FIGURE-03

Item	Ref. No.	Description (EN)	Qty.
3_01	26000-YQ2A-0100	Lithium Battery (60V/32Ah)	1
3_02	21100-YQ2B-0000	Controller Assy.	1
3_03	B3-002-06-010-F0	Screw (M6*10)	4
3_04	B3-002-05-010-F0	Screw (M5*10)	2
3_05	21103-YQ2A-0000	Controller Upper Decoration Plate	1
3_06	21700-YQ2A-1200	Charger 67.2V-10A	1
3_07	B8-001-06-016-F2	Screw (M6*16)	5

FIGURE-04

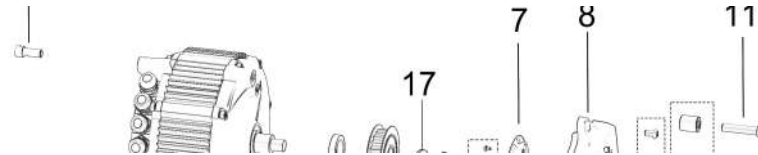

Item	Ref. No.	Description (EN)	Qty.
4_01	11000-YQ2A-0200	Motor Assy.	1
4_02	B7-001-25-35-7	Oil Seal	1
4_03	B6-003-05-016	Plain Circular Bond (5*5*16mm)	1
4_04	13201-YQ2A-0100	Fr. Belt Pulley	1
	13211-YQ2A-0000	1st Transmission Sprocket 1 (13T)	1
4_05	B2-006-12-F2	Locknut (M12*1.25)	1
4_06	FB03-004-006-F2	Screw (PB3.5*6)	3
4_07	32332-YQ2A-0000	Bush, Fr. Belt Pulley Protection Cover	1
4_08	32331-YQ2A-0000	Protection Cover, Fr. Belt Pulley	1
4_09	B3-002-06-010-F0	Bolt (M6*10)	2
4_10	11216-YQ2A-0000	Motor Left Mounting Bush	2
4_11	B3-001-08-040-F0	Bolt (M8*40)	1

4_12	11171-YQ2A-0000	Motor Position Adjuster	1
4_13	11172-YQ2A-0000	Motor Position Adjuster Pressure Plate	2
4_14	B3-001-08-045-F0	Bolt (M8*45)	1
4_15	B3-001-08-020-F0	Bolt (M8*20)	1
4_16	B3-001-08-025-F0	Bolt (M8*20)	1
4_17	FB05-002-23-12-1-F3	Washer (Φ24*Φ10*1.6-3)	1

FIGURE-05

Item	Ref. No.	Description (EN)	Qty
5_01	32340-YQ2A-0000	Decoration Cover, Electric Lock	1
5_02	B3-003-05-010-F0	Screw (M5*10)	2
5_03	B4-007-05-F1	Split Damping Ring (Inner Dia. Φ5)	2

5_04	32356-YQ2A-0000	Battery Left Limitation Stop (Plastic)	1
5_05	B3-003-05-010-F0	Screw (M5*10)	2
5_06	32357-YQ2A-0000	Battery Right Limitation Stop (Plastic)	1
5_07	32361-YQ2A-0000	Controller Lower Decoration Cover	1
5_08	B3-002-06-010-F0	Screw A (M6*10)	2
5_09	FB3-003-04-013-F3	Screw B (M4*13)	2
5_10	32358-YQ2A-0000	Battery Lower Limitation Stop (Plastic)	1
5_11	B3-003-05-012-F0	Screw (M5*12)	5
5_12	26343-YQ2A-0000	Battery Lower Buffer Foam	1
5_13	FB3-003-04-013-F3	Screw (M4*13)	2
5_14	32365-YQ2A-0000	Small Fender, Belt Pulley (Plastic)	1
5_15	FB3-003-04-013-F3	Screw (M4*13)	2
5_16	B3-003-05-016-F0	Screw (M5*16)	2
5_17	32353-YQ2A-0000	Back Up Block (Plastic)	1
5_18	32355-YQ2A-0000	Rear Fender, Battery (Plastic)	1
5_19	FB3-001-06-012-F0	Screw (M6*12)	2
5_20	B2-006-05-F2	Nut (M5)	2
5_21	B3-002-06-012-F0	Screw (M6*12)	2
5_22	26341-YQ2A-0000	Fr. Damping Rubber Washer, Battery	1
5_23	26290-YQ2A-0000	Lock Bracket Hook, Battery	1
5_24	32233-YQ2A-0000	Buffer Rubber, Battery Compartment Cover	1
5_25	32231-YQ2A-0000	Battery Compartment Cover (Plastic)	1
5_26	B2-001-06-F2	Nut (M6)	2
5_27	82124-YQ2A-0000	Decoration Label, Battery Compartment	1
5_28	B3-002-06-012-F0	Screw (M6*12)	2
5_29	41762-YQ2A-0000	Pin, Battery Compartment Cover	2

FIGURE-06

Item	Ref. No.	Description (EN)	Qty
6_01	32354-YQ2A-0000	Rear Back Up Block, Battery	1
6_02	41690-YQ2A-0000	Lower Back Up Block, Battery	1
6_03	FB3-001-06-016-F0	Screw A (M6*16)	2
6_04	B3-001-06-010-F0	Screw B (M6*10)	2
6_05	B4-009-06-014-F0	Motor Position Adjuster Limitation Pin (M6*14)	1
6_06	B3-009-08-020-F0	Screw (M8*20)	4
6_07	FB02-003-08-F2	Clip (M8)	4
6_08	41750-YQ2A-0000	Motor Protection Cover	1
6_09	41740-YQ2A-0000	Lower Right Mounting Bracket, Controller	1

6_10	41730-YQ2A-0000	Lower Left Mounting Bracket, Controller	1
6_11	B3-002-06-010-F0	Screw (M6*10)	4
6_12	B4-002-06-F2	Washer (Φ6)	4
6_13	B3-001-06-012-F0	Screw (M6*12)	2
6_14	41710-YQ2A-0000	Upper Mounting Bracket, Controller	1
6_15	41670-YQ2A-0000	Front Fender, Battery	1
6_16	B3-002-06-012-F0	Screw (M6*12)	2
6_17	B3-002-05-010-F0	Screw (M5*10)	1
6_18	FB02-001-06-F2	Clip (M6)	2
6_19	B3-001-06-016-F0	Screw (M6*16)	2
6_20	B4-002-06-F2	Spring Washer	2

FIGURE-07

Item	Ref. No.	Description (EN)	Qty.
7_01	51231-YQ2A-0010	Rear Tire	1
7_02	51232-YQ2A-0010	Rear Inner Tube	1
7_03	51266-YQ2A-0000	Rim Band	1
7_04	51271-YQ2A-0100	Rear Rim	1
7_05	13204-YQ2A-0000	Sprocket (48T)	1
7_06	B3-001-08-016-F0	Screw (M8*16)	5
7_07	51311-YQ2A-0000	Rear Wheel Hub	1
7_08	52271-YQ2A-0000	Rear Brake Disc	1
7_09	52280-YQ2A-0000	Rear Brake Clip Bracket	1


7_10	51350-YQ2B-0000	Rear-Wheel Axle	1
7_11	51362-YQ2A-0000	Rear-Wheel Left Setback Bushing	1
7_12	FB3-006-06-013-F3	Screw (M6*13)	6
7_13	51361-YQ2A-0000	Rear-Wheel Right Setback Bushing	1
7_14	B2-006-12-F2	Nut (M12*1.25)	1
7_15	51390-YQ2A-0000	Spoke Assy.	36
7_16	B7-001-20-37-7	Oil Seal (Φ20-Φ37-7)	2
7_17	Z-6202-35-15-11	Bearing (Φ15*Φ35*11)	2
7_18	51363-YQ2A-0000	Rear-Whel Hub Inner Bushing	1

FIGURE-8

Item	Ref. No.	Description (EN)	Qty.
8_01	23200-YQ2B-0000	Left Combination Switch	1
8_02	27260-YQ2A-0000	Electric Lock	1
8_03	24600-YQ2A-0000	USB Interface	1
8_04	B2-006-06-F2	Nut (M6)	1
8_05	B4-001-06-F1	Plain Washer (Φ6)	1
8_06	B3-001-06-016-F0	Screw (M6*16)	1
8_07	29310-NM1A-0000	Horn	1
8_08	B1-008-06-016-F2	Screw A (M6*16)	1
8_09	FB01-003-06-016-F2	Screw B (M6*16)	1
8_10	27500-YQ2A-0000	Battery Compartment Lock	1

8_11	41571-YQ2A-0000	Magneto Sensor, Side Stand Stop Switch	1
8_12	23410-YQ2A-0000	Side Stand Stop Switch	1
8_13	23700-NM1A-0000	Acceleration Controller	1
8_14	21300-YQ2A-0000	Converter Assy.	1
8_15	FB3-003-04-013-F3	Screw (M4*13)	2
8_16	FB3-003-04-013-F3	Screw (M4*13)	2

FIGURE-9

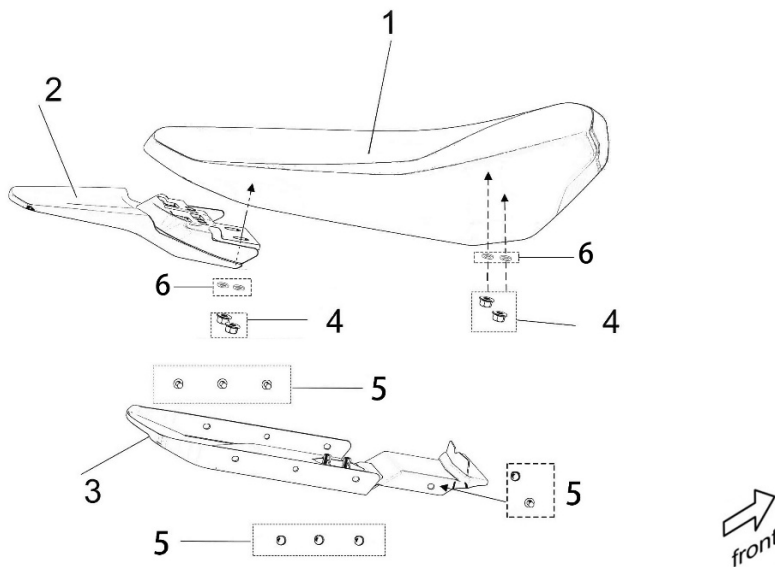

Item	Ref. No.	Description (EN)	Qty.
9_01	32300-YQ2A-0000	Seat (Plastic)	1
9_02	31321-YQ2A-0000	Rear Fender (Plastic)	1
9_03	31340-YQ2A-0000	Rear Fender Inner Plate (Plastic)	1


9_04	B2-012-06-F2	Nut (M6)	4
9_05	B5-004-R5075	Screw, Rear Fender Inner Plate	8
9_06	B4-001-6-F1	Plain Washer (Φ6)	4

FIGURE-10

Item	Ref. No.	Description (EN)	Qty.
10_01	B3-006-003-F1	Screw (ST4.2*13)	1
10_02	FB04-001-04-F2	Clip (M4)	1
10_03	32351-YQ2A-0000	Left Decoration Cover, Battery Lock Bracket (Plastic)	1


10_04	FB3-001-06-012-F0	Screw B (M6*12)	2
10_05	32352-YQ2A-0000	Right Decoration Cover, Battery Lock Bracket (Plastic)	1
10_06	B3-002-06-010-F0	Screw A (M6*10)	2
10_07	27516-YQ2A-0000	Decoration Ring, Battery Compartment Lock	1

FIGURE-11

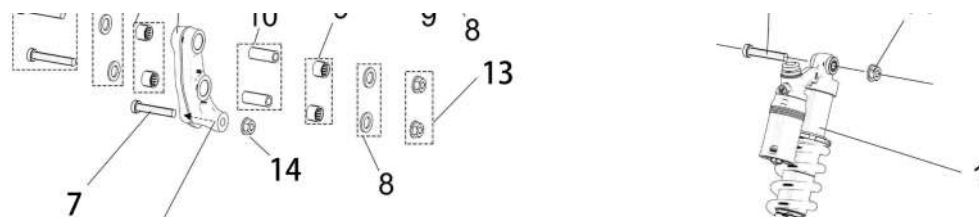

Item	Ref. No.	Description (EN)	Qty.
11_01	55110-YQ2A-0300	Rear Absorber (DNM)	1
11_02	55148-YQ2A-0000	Rear Absorber Connection Rod	1


11_03	55141-YQ2A-0000	Rear Absorber Rock Arm	1
11_04	B3-001-08-035-F2	Bolt (M8*35)	2
11_05	B3-001-08-055-F2	Rear Absorber Rock Arm Mounting Axle (Half-Thread L55-M8)	2
11_06	B3-001-08-050-F2	Screw (Half-Thread L50-M8)	1
11_07	B3-001-08-045-F2	Screw (Half-Thread L45-M8)	1
11_08	55163-YQ2A-0000	Nylon Washer (Φ 12- Φ 20-2)	8
11_09	Z-HK1212-16-12-12	Rock Arm Bearing	6
11_10	55142-YQ2A-0000	Rock Arm Bushing	4
11_11	55162-YQ2A-0000	Connection Rod Bushing	2
11_12	B4-001-08-F1	Plain Washer (Φ 8)	2
11_13	B2-006-08-F2	Nut (M8)	2
11_14	B2-006-08-F2	Nut (M8)	2

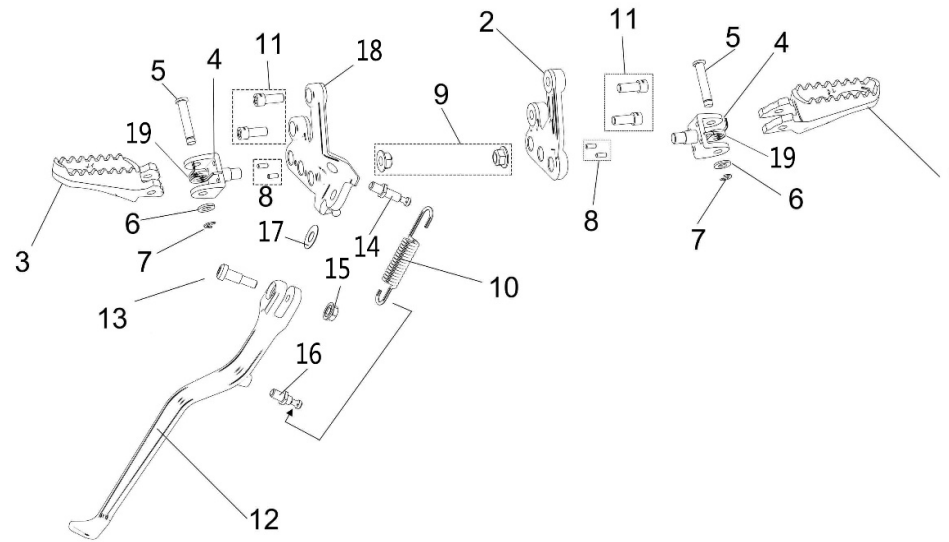FIGURE-12

Item	Ref. No.	Description (EN)	Qty.
12_01	42211-YQ2A-0000	Right Foot Peg	1
12_02	42212-YQ2A-0000	Right Foot Peg Bracket	1
12_03	42111-YQ2A-0000	Left Foot Peg	1
12_04	42122-YQ2A-0001	Left Foot Peg Bracket	2
12_05	42116-YQ2A-0000	Foot Peg Mounting Pin	2
12_06	B4-001-08-F1	Foot Peg Plain Washer (Φ8)	2
12_07	B4-007-06-F1	Foot Peg Clip Spring Reed (Inner Dia. Φ6)	2
12_08	B4-008-04-012-F0	Position Pin (Φ4*12)	4
12_09	B2-006-10-F2	Nut (M10*1.25)	2

12_10	41556-YQ2B-0000	Side Stand Bracket Spring	1
12_11	B3-001-08-020-F0	Screw (M8*20)	4
12_12	41550-YQ2A-0000	Side Stand	1
12_13	41159-YQ2A-0000	Screw (M8*30)	1
12_14	41554-YQ2A-0000	Side Stand Spring Pin A	1
12_15	B2-006-08-F2	Nut (M8)	1
12_16	41555-YQ2A-0000	Side Stand Spring Pin B	1
12_17	FB05-004-10-F0	Washer (Φ24*Φ10-0.5)	1
12_18	42112-YQ2A-0000	Left Foot Peg Bracket	1
12_19	42115-YQ2A-0000	Foot Peg Return Spring	2


FIGURE-13

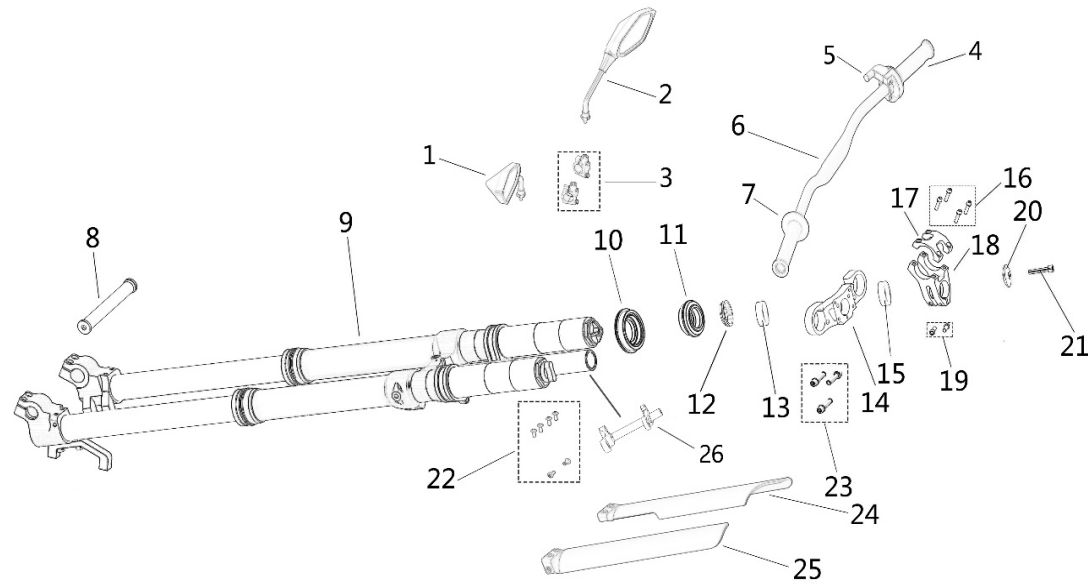

Item	Ref. No.	Description (EN)	Qty.
13_01	51410-YQ2B-0000	Left Rear View Mirror	1
13_02	51420-YQ2B-0000	Right Rear View Mirror	1
13_03	51430-YQ2B-0000	Rear View Mirror Bracket	2
13_04	23820-YQ2A-0001	Right Handle Grip	1
13_05	23900-YQ2A-0000	Right Throttle Bracket	1
13_06	51150-YQ2A-0000	Steering Bar	1
13_07	23810-YQ2A-0001	Left Handle Grip	1
13_08	51250-YQ2A-0300	Front Wheel Axle Assy (DNM)	1
13_09	51000-YQ2B-0000	Front Absorber Assy. (DNM)	1

13_10	51181-YQ2A-0100	Lower Headset, Steering Stem	1
13_11	51182-YQ2A-0100	Upper Headset, Steering Stem	1
13_12	51184-YQ2A-0000	Split Snap Ring	1
13_13	51196-YQ2A-0000	Handle Bar Stem Washer	1
13_14	51121-YQ2A-0300	Upper Connecting Plate, Steering Stem (DNM)	1
13_15	51195-YQ2A-0000	Handle Bar Stem Washer (DNM)	1
13_16	B8-001-05-018-F0	Handle Bar Lock Screw (M5*18)	4
13_17	51164-YQ2A-0000	Cap, Handle Bar Stem	1
13_18	51162-YQ2A-0000	Bracket, Handle Bar Stem	1
13_19	B8-001-06-018-F0	Handle Bar Stem Lock Screw (M6*18)	2
13_20	51183-YQ2A-0100	Lock cap, Handle Bar Stem	1
13_21	51185-YQ2A-0100	Decoration Screw Kit, Headset	1
13_22		Mounting Screw, Absorber Protection Plate (DNM)	6
13_23	B3-001-05-014-F0	Lock Screw (DNM-M5*14)	3
13_24	32280-YQ2A-0300	Absorber R. Protection Plate (DNM)	1
13_25	32270-YQ2A-0300	Absorber L. Protection Plate (DNM)	1

FIGURE-14

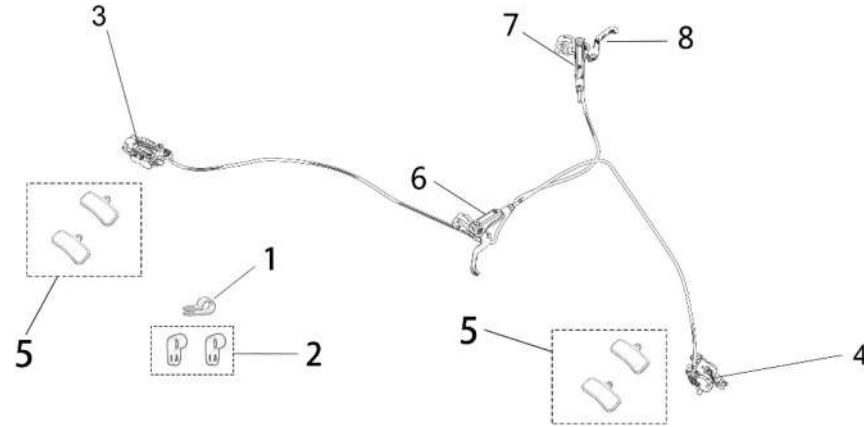

Item	Ref. No.	Description (EN)	Qty.
14_01	81138-YQ2A-0000	Nylon Wire Clip 2	2
14_02	81137-YQ2A-0000	Nylon Wire Clip 1	2
14_03	52190-YQ2A-0000	Rear Brake Clip Assy.	1
14_04	52190-YQ2A-0000	Front Brake Clip Assy.	1
14_05	52191-YQ2A-0000	Brake Shoe	2
14_08	52111-YQ2B-0000	Brake Lever	2

FIGURE-15

Item	Ref. No.	Description (EN)	Qty.
15_01	61282-YQ2A-0000	Mid. Bushing, Intermediate Shaft Sleeve	1
15_02	B3-003-06-025-F3	Screw (M6*25)	6
15_03	13114-YQ2A-0000	Chain	1
15_04	61234-YQ2A-0000	R. Bushing, Intermediate Shaft	1
15_05	B7-001-15-24-7	R. Oil Seal, Intermediate Shaft Sleeve	1
15_06	13105-YQ2A-0000	Sprocket, Output Shaft	1
15_07	61233-YQ2A-0000	L. Bushing, Intermediate Shaft	1
15_08	Z-6000-2Z-26-10-08	Bearing, Intermediate Shaft Sleeve	1
15_09	61281-YQ2A-0000	Intermediate Shaft Sleeve	1
15_10	B3-001-06-016-F0	Screw (M6*16)	6


15_11	13202-YQ2A-0100	Rear Belt Pulley	1
15_12	13111-YQ2A-0100	Belt	1
15_13	B7-001-15-26-6	L. Oil Seal, Intermediate Shaft Sleeve	1

FIGURE-16

Item	Ref. No.	Description (EN)	Qty.
16_01	24100-YQ2B-0000	Main Wire Assy.	1
16_01-01	22950-YQ2B-0000	Flasher	1
16_02	21250-YQ2A-0000	Dump Sensor	1
16_03	B2-012-03-F2	Nut (M3)	4
16_04	23500-YQ2A-0000	Single - Phase Circuit Breaker	1

16_05	81125-YQ2A-0000	Isolation Washer ($\Phi 7 * \Phi 3.2 * 5$)	4
16_06	B3-001-03-040-F2	Screw (M3*40)	4
16_07	B4-001-04-F1	Washer ($\Phi 4$)	4
16_08	81153-NM1A-0000	Nylon Clip 3	1


FIGURE-17

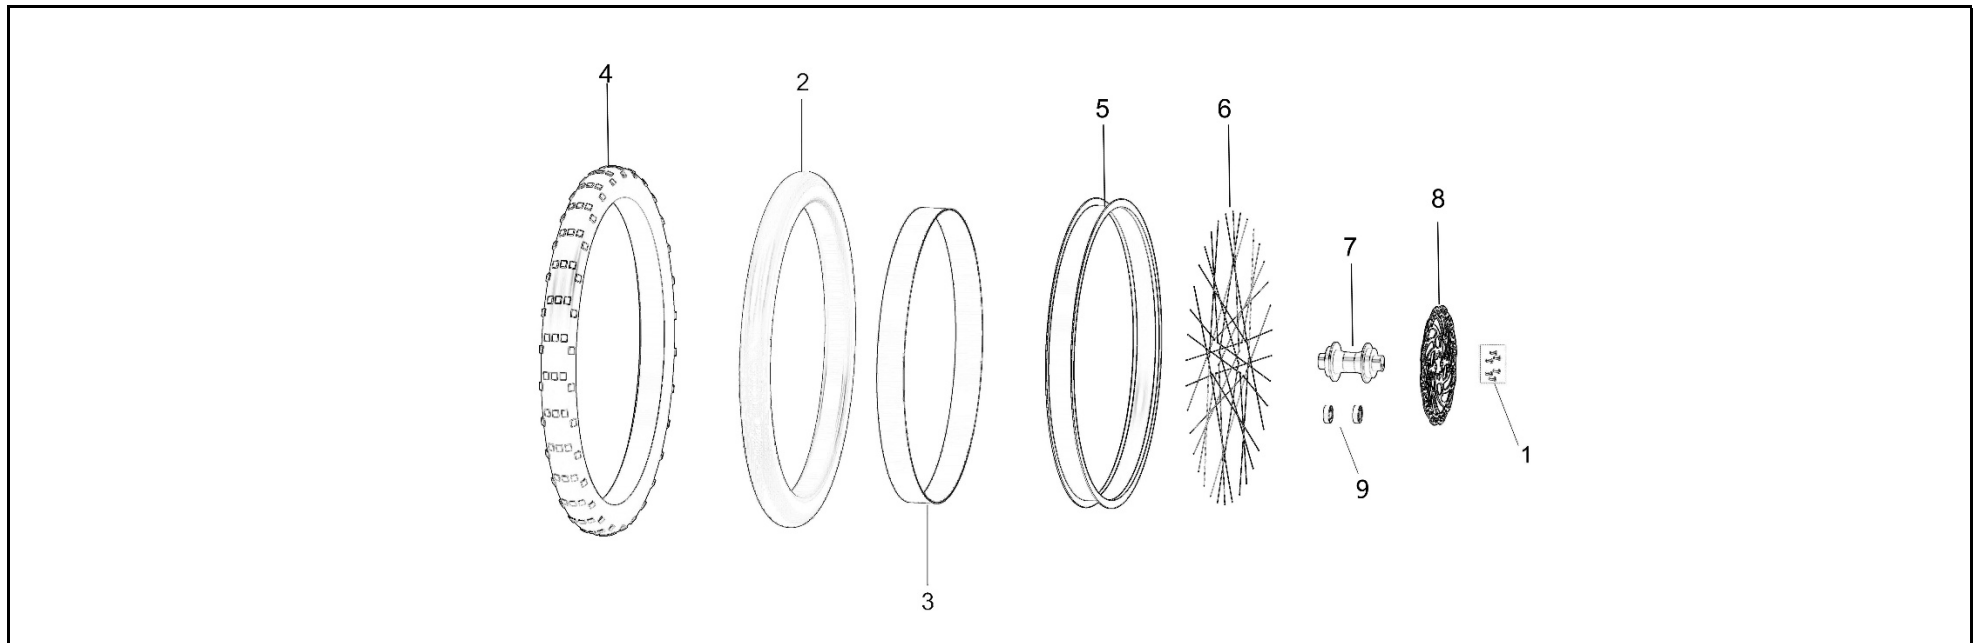

Item	Ref. No.	Description (EN)	Qty.
17_01	FB03-006-05-010-F3	Screw (M5*10)	6
17_02	51232-YQ2A-0010	Front Inner Tube	1
17_03	51266-YQ2A-0000	Rim Band	1
17_04	51231-YQ2A-0010	Front Tire	1
17_05	51271-YQ2A-0100	Front Rim	1
17_06	51290-YQ2A-0002	Spoke Assy.	36

17_07	51210-YQ2A-0000	Front Wheel Hub Assy.	1
17_08	52171-YQ2A-0000	Front Brake Disc	1
17_09		Front Wheel Axle	2

FIGURE-18

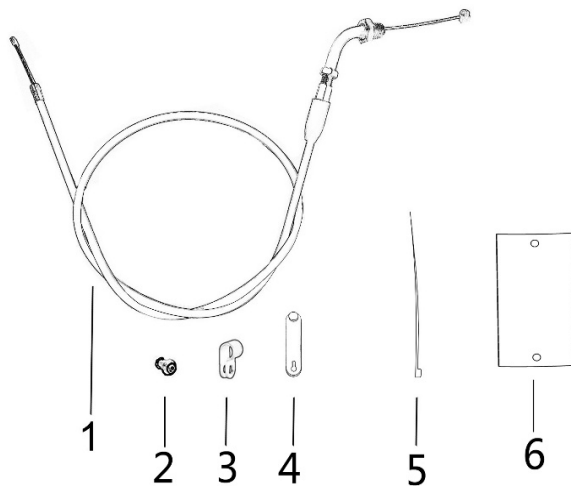


Item	Ref. No.	Description (EN)	Qty.
18_01	71110-YQ2A-0000	Throttle Cable	1
18_02	FB03-004-008-F2	Screw (M5*8)	1
18_03	81138-YQ2A-0000	Nylon Wire Clip 2	1
18_04	81135-NM1A-0000	Rubber Strip	2
18_05	81145-NM1A-0000	Wire Fixing Strip	14
18_06	41591-YQ2B-0000		1

 FIGURE-19

Item	Ref. No.	Description (EN)	Qty.
19_01	22200-YQ2B-0000	Tail Lamp	1
19_02	22920-YQ2B-0000	Rear Reflector	1
19_03	FB03-001-06-012-F0	Screw (M6*12)	2
19_04	B4-002-06-F2	Spring Washer (Φ6)	2
19_05	B4-001-6-F1	Plain Washer (Φ6)	2
19_06	81181-YQ2B-0001	Rear Billboard	1
19_07	22400-YQ2B-0000	Rear Right Turning Light	1
19_08	41510-YQ2B-0000	Mounting Bracket, Rear Turning Light	1
19_09	22300-YQ2B-0000	Rear Left Turning Light	1
19_10	32367-YQ2B-0000	Cover Plate, Tail Lamp Bracket	1


19_11	32366-YQ2B-0000	Tail Lamp Bracket	1
19_12	B2-006-06-F2	Nut (M6)	2
19_13	FB03-003-04-013-F3	Screw (M4*13)	1
19_14		Support Rubber, Rear Lisence Plate	1
19_15	B2-006-06-F0	Nut (M6)	2
19_16	B2-006-06-F0	Fixing Nut (M6)	1
19_17	B3-002-06-012-F0	Screw (M6*12)	4
19_18	31331-YQ2B-0000	Rear Fender (Rear Wheel)	1
19_19	FB03-003-04-013-F3	Screw (M4*13)	3
19_20	41490-YQ2B-0000	R. Mounting Bracket, Rear Fender	1
19_21	41480-YQ2B-0000	L. Mounting Bracket, Rear Fender	1

FIGURE-20

Item	Ref. No.	Description (EN)	Qty.
20_1	25100-YQ2B-0000	Speedometer	1
20_2		Speedometer Buffer Rubber Washer	2
20_3	B4-001-06-F1	Speedometer Mounting Washer	2
20_4	41350-YQ2B-0000	Speedometer Bracket	1
20_5	31130-YQ2B-0000	Speedometer Cover	1
20_6	B3-002-06-016-F0	Screw (M6*16)	3
20_7	B2-012-06-F2	Fixing Nut (M6)	2
20_8	41342-YQ2B-0000	R. Protection Plate, Head Light	1
20_9	41341-YQ2B-0000	L. Protection Plate, Head Light	1
20_10	22100-YQ2B-0000	Head Light Assy.	1
20_11	41330-YQ2B-0000	Bracket Assy., Head Light	1

20_12	B3-002-06-012-F0	Fr. Turning Light Protection Plate Fixing Screw (M6*12)	4
20_13	B3-002-06-012-F0	Head Light Mounting Screw (M6*12)	4
20_14	B3-003-05-016-F0	Steering Lock Mounting Screw (M5*12)	2
20_15	27100-YQ2B-0000	Steering Lock	1
20_16	22400-YQ2B-0000	Fr. R. Turning Light	1
20_17	22300-YQ2B-0000	Fr. L. Turning Light	1
20_18	22910-YQ2B-0000	Side Reflector	2
20_19	31218-YQ2B-0000	Front Fender Mounting Bushing	3
20_20	31211-YQ2B-0000	Front Fender	1
20_21	B3-002-06-012-F0	Front Fender Mounting Screw	3

FIGURE-21

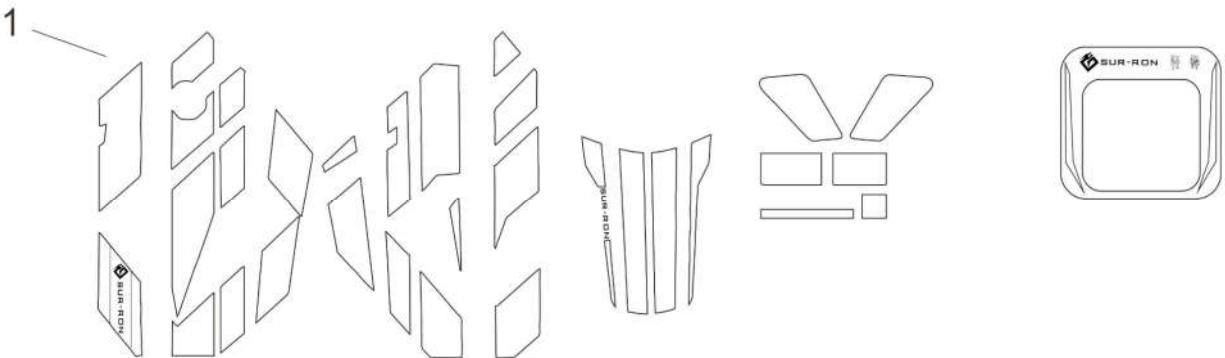			
Item	Ref. No.	Description (EN)	Qty.
21_1	82120-YQ2A-0000	Sticker	1